

3:1 HDMI/VGA/DP Switching Extender with Scaling Receiver, Relay Triggering and HDCP 2.2

EX-SW-0301-H2



Quickstart Guide

WyreStorm recommends reading through this document in its entirety to become familiar with the product's features before beginning the installation process.



IMPORTANT! Installation Requirements


This extender requires connection via RS-232 or Ethernet in order to configure functions such as EDID. Ensure that the following items are on hand before proceeding with the installation.

- PC or Mac
- Telnet and Terminal software such as PuTTY
- USB COM Port Adapter (Not Included)
- WyreStorm Part: CAB-USB-3PIN
- Network router and/or switch if using IP telnet for configuration.
- Latest version of the EX-SW-0301-H2 API for advanced configuration not covered in this document.

In the Box

- 1x EX-SW-0301-H2 Transmitter
- 1x EX-SW-0301-H2 Receiver
- 1x AC 100-240V 50/60Hz to DC 12V Power Adapter
- 5x 3-pin Phoenix Connectors
- 4x Mounting Brackets (1set for Transmitter/1set for Receiver)
- 1x Quickstart Guide (This Document)

Basic Wiring Diagram

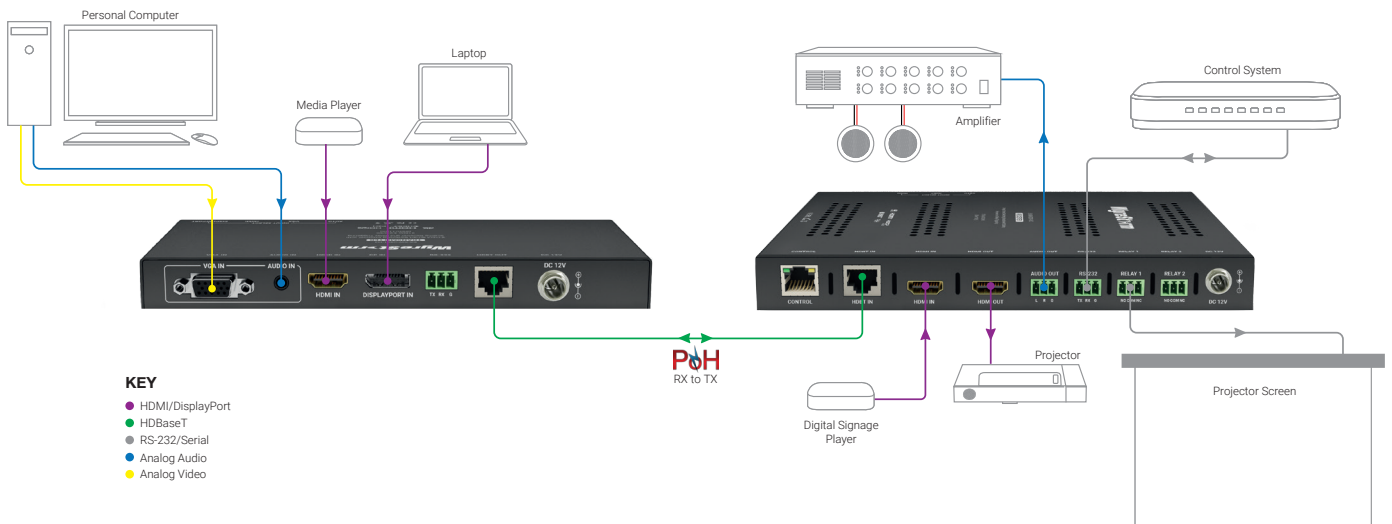


Wiring and Connections

WyreStorm recommends that all wiring for the installation is run and terminated prior to making connections to the switcher. Read through this section in its entirety before running or terminating any wires to ensure proper operation and to avoid damaging the equipment.

IMPORTANT! Wiring Guidelines

- The use of patch panels, wall plates, cable extenders, kinks in cables, and electrical or environmental interference will have an adverse effect on signal transmission which may limit performance. Steps should be taken to minimize or remove these factors completely during installation for best results
- WyreStorm recommends using pre-terminated HDMI and DP cables due to the complexity of these connector types. Using pre-terminated cables will ensure that these connections are accurate and will not interfere with the performance of the product.


Cat6 Cable Performance Guide

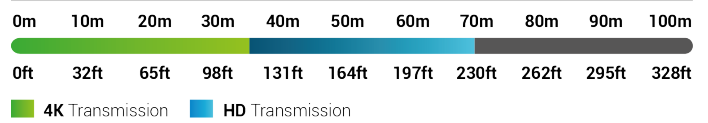

Audio Connections

Audio In (TX)

The audio connections use a 3.5mm (1/8in) TRS Stereo Jack.

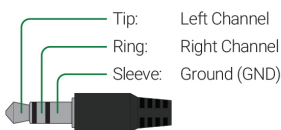

Audio Out (TX/RX)

WyreStorm Connector		3rd Party Device
Pin 1	Left Positive (L+)	---> To ---> Left Positive (L+)
Pin 2	Right Positive (R+)	---> To ---> Right Positive (R+)
Pin 3	Ground (G)	---> To ---> Left Negative (L-) Right Negative (R-)

Communication Connections

RS-232 Wiring

The EX-SW-0301-H2 uses a 3-pin RS-232 with no hardware flow control. Most control systems and computers are DTE where pin 2 is RX, this can vary from device to device. Refer to the documentation for the connected device for pin functionality to ensure that the correct connections can be made.

WyreStorm Connector		3rd Party Device
Pin 1	TX (Transmit)	---> To ---> RX (Receive)
Pin 2	RX (Receive)	---> To ---> TX (Transmit)
Pin 3	G (Ground)	---> To ---> G (Ground)

PC Connection

Connection to a PC requires the use of a USB to 3-pin Port Adapter cable (CAB-USB-3PIN) in order for a port to be provided on the PC.

Relay Wiring

The relays on this extender can be used to be trigger devices such as projector screens that are Normally Open (NO) or Normally Closed (NC).

WyreStorm Connector		3rd Party Device
Pin 1	NO (Normally Open)	---> To ---> NO (Normally Open)
Pin 2	Common (Ground)	---> To ---> Common (Ground)
Pin 3	NC (Normally Closed)	---> To ---> NC (Normally Closed)

Troubleshooting

No or Poor Quality Picture (snow or noisy image)

- Verify that power is being supplied to the transmitter and receiving device.
- Verify that the HDBaseT cable is properly terminated following EIA568B standard.
- Verify that the output resolution of the source and display is supported by this extender.
- Configure EDID Settings to a lower resolution.
- If transmitting 3D or 4K, verify that the HDMI cables used are 3D or 4K rated.
- Verify that all source and HDBaseT connections are not loose and are functioning properly.

No or Intermittent 3rd party Device Control

- Verify that the RS-232/Ethernet cables are properly terminated following the [Wiring and Connections](#) section.

Relays Not Functioning

- Verify polarity of the relay connections.

Troubleshooting Tips

- WyreStorm recommends using a cable tester or connecting the cable to other devices to verify functionality.

Setup and Configuration

The EX-SW-0301-H2 is configured using RS-232 and/or Telnet commands for IP address, Output Resolution, and EDID. Follow these steps to properly configure the extender based on the system requirement.

Note: The steps and information provided in this QSG are for basic operation of the extender out of the box. Refer to the [EX-SW-0301-H2 API](#) for full configuration settings.

1. Assign a Static IP Address to ensure proper communication on an IP Network. See [Configuring a Static IP Address](#)
2. Set an Output Resolution to be used by the RX. See [Configuring RX Output Resolution](#)
3. Set EDIDs to be used at each input of the device. See [Configuring Input EDIDs](#)

Communication Settings

The commands listed below can be sent by connecting to either the TX or RX for RS-232 and the RX only for Ethernet. Each device must be connected together via HDBaseT in order to send a command from one device to the other. The only exception is [Configuring a Static IP Address](#) which requires connection to the RX.

RS-232 and IP Settings

Baud rate:	115200
Data Bits:	8bits
Parity:	None
Stop Bits:	1bit
Flow Control:	None
Default IP Address	192.168.11.43
Default IP Port	23

Configuring a Static IP Address

By default, the switcher is set to a static IP of 192.168.11.043. We recommend changing this as it shared with other WyreStorm products and may cause improper communication if left unchanged. Connect to the RX via RS-232 and send the following command to set the IP address.

```
SET IPADDR STATIC ip4addr [IP Address] netmask [Netmask]<CR/LF>
Example: SET IPADDR STATIC ip4addr 192.168.11.243 netmask 255.255.255.0 <CR/LF>
Response: IPADDR STATIC ip4addr 192.168.11.243 netmask 255.255.255.0 <CR/LF>
```

Note: This command can only be sent to the receivers (RX) RS-232 port.

Configuring RX Output Resolution

By default, all inputs are set to an EDID or 1920x1080@60Hz 2CH. However, this can be configured to suit the installation.

Set Output Resolution	Resolution= AutoScaler
SET RES all [Resolution] rx<CR/LF>	Fix:1024x768@60
Example:	Fix:1280x720@60
SET RES all Fix:1920x1200@60 rx<CR/LF>	Fix:1280x800@60
Response:	Fix:1280x1024@60
RES SET all Fix:1920x1200@60 rx<CR/LF>	Fix:1920x1080@60
	Fix:1920x1200@60
	Fix:3840x2160@30
	Fix:3840x2160@60
Query Output Resolution	AutoScaler
GET RES_OUT all rx<CR/LF>	Fix:1024x768@60
Example:	Fix:1280x720@60
GET RES_OUT all rx<CR/LF>	Fix:1280x800@60
Response:	Fix:1280x1024@60
RES GET all Fix:1920x1200@60 rx<CR/LF>	Fix:1920x1080@60
	Fix:1920x1200@60
	Fix:3840x2160@30
	Fix:3840x2160@60
	Auto:[Resolution] Resolution=Scaled resolution based of connected display

Configuring Input EDIDs

By default, all inputs are set to an EDID or 1920x1080@60Hz 2CH. However, this can be configured to suit the installation.

Set Input EDID	Input=hdmI_tx dp_tx vga_tx hdbt_rx hdmI_rx
SET EDID [Input] [Resolution]<CR/LF>	Resolution= 3840x2160@30Hz/1920x1200@60Hz
Example:	1920x1080@60Hz
SET EDID hdmI_tx 1920x1080@60Hz<CR/LF>	1680x1050@60Hz
Response:	1600x900@60Hz
EDID SET hdmI_tx 1920x1080@60Hz<CR/LF>	1440x900@60Hz
Query Input EDID	1360x768@60Hz
GET EDID [Input]<CR/LF>	1280x720@60Hz
Example: GET EDID hdmI_tx<CR/LF>	1024x768@60Hz
Response	
EDID GET hdmI_tx 1920x1080@60Hz <CR/LF>	

Specifications

Audio and Video				
	Transmitter		Receiver	
Inputs	1x VGA In: 15-pin VGA 1x Display Port In: DisplayPort 1.3 1x HDMI In: 19-pin type A		1x HDMI In: 19-pin type A 1x HDBT In: 8-pin RJ-45 Female	
Outputs	1x HDBT Out (Class A): 8-pin RJ-45 Female		1x HDMI Out: 19-pin type A 1x Audio Out: 3-pin Phoenix	
Output Video Encoding	HDBaseT Class B			
Encoding Data Rate	9.2Gbps			
End to End Latency	10µs (micro seconds)			
Audio Formats	2ch Analog/PCM Multichannel: LPCM			
Video Resolutions (Max)	Video Resolution	HDMI	Cat6	Cat6a/7
	1920x1200p @60Hz 12bit	15m/49ft	60m/197ft	70m/230ft
	1920x1080p @60Hz 12bit	15m/49ft	60m/197ft	70m/230ft
	3840x2160p @30Hz 8bit 4:4:4	7m/23ft	35m/115ft	40m/131ft
	4096x2160p @60Hz 8bit 4:2:0	7m/23ft	35m/115ft	40m/131ft
Supported Standards	DCI RGB			
Maximum Pixel Clock	HDMI: 600mHz HDBaseT: 297MHz			
Communication and Control				
HDMI	HDMI HDCP 2.2 EDID DVI/D supported with adapter (not included)			
HDBaseT	HDMI HDCP 2.2 EDID 1-way PoH Receiver to Transmitter			
Ethernet	1x 8-pin RJ-45 female IP Control (TELNET)			
RS-232	1x RS-232: 3-pin Phoenix (Transmitter and Receiver)			
Relays	2x Relay: 3-pin Phoenix (Receiver Only)			
Power				
Power Supply	12V DC 3A			
PoH	IEEE 802.3af 15.4W Max Receiver to transmitter			
Max Power Consumption	Transmitter: 7W Receiver: 17W			
Environmental				
Operating Temperature	0 to + 45°C (32 to + 113 °F), 10% to 90%, non-condensing			
Storage Temperature	-20 to +70°C (-4 to + 158 °F), 10% to 90%, non-condensing			
Maximum BTU	Transmitter: 24 BTU/hr Receiver: 58 BTU/hr			
Dimensions and Weight				
	Transmitter		Receiver	
Rack Units/Wall Box	<1U		<1U	
Height With Without Feet	20mm/0.79in		25mm/0.99in	
Width With Without Brackets	194mm/7.64in		223mm/8.78in	
Depth With Without Handles	94mm/3.71in		154mm/6.07in	
Weight	0.5kg/1.1lbs		0.94kg/2.07lbs	
Regulatory				
Safety and Emission	CE FCC RoHS			

Note: WyreStorm reserves the right to change product specification, appearance or dimensions of this product at any time without prior notice.

Warranty Information

WyreStorm Technologies LLC warrants that its products to be free from defects in material and workmanship under normal use for a period of five (5) years from the date of purchase. Refer to the Product Warranty page on wyrestorm.com for more details on our limited product warranty.

